



**PHASE**




**USER MANUAL**

**MALEKHO**

MALEKHO HEAVY INDUSTRY CORPORATION  
1001 South Riviera Circle – Cedar Park, TX 78613 – 512 431 5428

Rev A

# CONTROLS AND CONNECTIONS

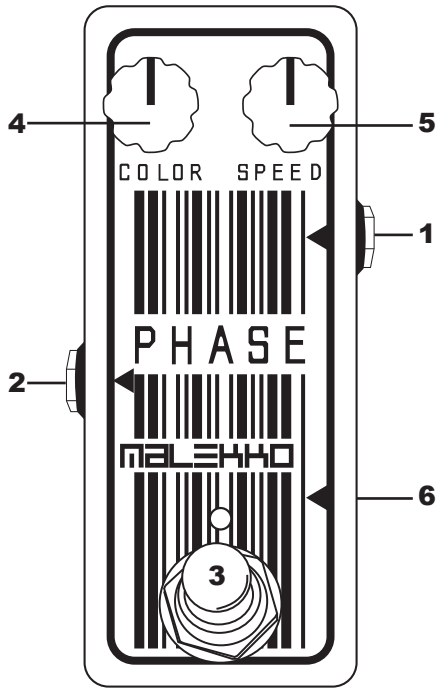

1. Input – You know what this is right?
2. Output – see item #1
3. Footswitch On/Off – Press the footswitch to turn your phase shifter on or off. When the LED is lit the effect is on.
4. Color – Shifts the phasing frequency. Counter clockwise, more bass passes through and decreases as you turn the potentiometer clockwise.
5. Speed – Adjusts the phase modulation speed.
6. 9V DC Power Supply Input – Use a 9VDC 200ma 2.1 negative tip regulated adapter (not included).




**Warning – Please read the following:**  
Important Safety Instructions



1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Do not use this apparatus near water.
5. Clean only with dry cloth.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Unplug this apparatus during lightning storms or when unused for long periods of time.
10. No user serviceable parts inside. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
11. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
12. Refer to labels on the unit, including bottom cover, or other markings and pertinent information.

## Using the Internal Frequency Trim Pot

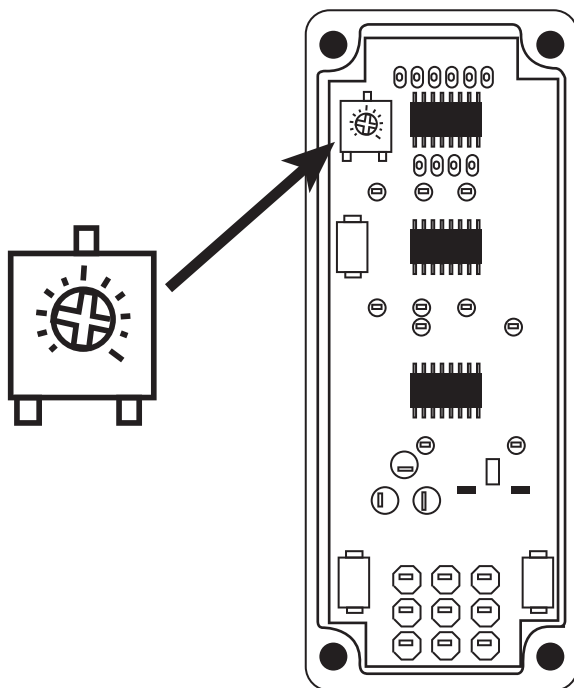

Use the internal trim pot to dial in a perfect phase tone.

For even more flexibility, this internal trim pot is a coarse frequency range selector. Simply flip the pedal over, unscrew the four retaining screws (screwdriver not included), and remove the bottom cover to reveal a tiny trim pot on the upper left-hand side. Reference diagram above.

Set all the way left will allow the lower frequencies to be phasing, all the way right allows more high end frequencies to pass. This combination of the internal trim pot and the COLOR knob work in conjunction so you can dial in your specific range perfectly!